

PS3 Arcadecontroller 4 Pinout

	R3/BN12	VCC
	GND	GND
	L3/BN11	TURBO
	MODE	R2 BN8
	HOME/ BN13	L2 BN7
	START BN10	R1 BN6
	Select BN9	L1 BN5
	UP	BN4
	DOWN	BN3
	LEFT	BN2
	RIGHT	BN1

www.arcadegames.se