

PS3 Arcadecontroller 5

	P1		USB	P0		
Select/Btn9	1	10	□LED	None	18	9 GND
Start/Btn10	2	11	×LED	Vcc	17	8 R2/Btn8
L3/Btn11	3	12	△LED	GND	16	7 L2/Btn7
R3/Btn12	4	13	○LED	Right	15	6 R1/Btn6
Home/Btn13	5	14	R1LED	Left	14	5 L1/Btn5
Mode1	6	15	L1LED	Down	13	4 ○/Btn4
Mode2	7	16	R2LED	Up	12	3 △/Btn3
Turbo	8	17	L2LED	None	11	2 ×/Btn2
GND	9	18	GND	None	10	1 □/Btn1

www.arcadegames.se